



N Structure Kit HARDWOOD FURNITURE CO. 933-3232

Thanks for purchasing this Cornerstone Series® kit. Please take a moment to read all of the instructions and study the drawings before starting. All parts are made from styrene plastic, so use paints and glues which are compatible.



This furniture company is right at home on layout from the 1920's to the present day. A steam-era facility can be served virtually by any 50' box car to bring in wood products. A typical plant will go through several carloads of lumber every day. Loads are usually delivered by a local way freight, which will also pick up any empties.

To complete your new industry, with vehicles, scenery material and other accessories, ask your dealer, refer to our current N Scale Reference Book or visit our Web-site at waltherscornerstone.com.

1. Glue windows (33, 35, 36), doors (34, 37, 38, 39) plug (51) into their appropriate openings in the walls (2, 3, 4, 5, 8). Glue all "glass" (43, 44, 45, 46, 47, 48, 49) to the back of the windows and door as illustrated.

2. Glue column backs (7) in place on back of wall # 2.


Note: Use pilaster # 15 for splicing two wall sections together, side by side. This will enable you to expand this building by using multiple kits.

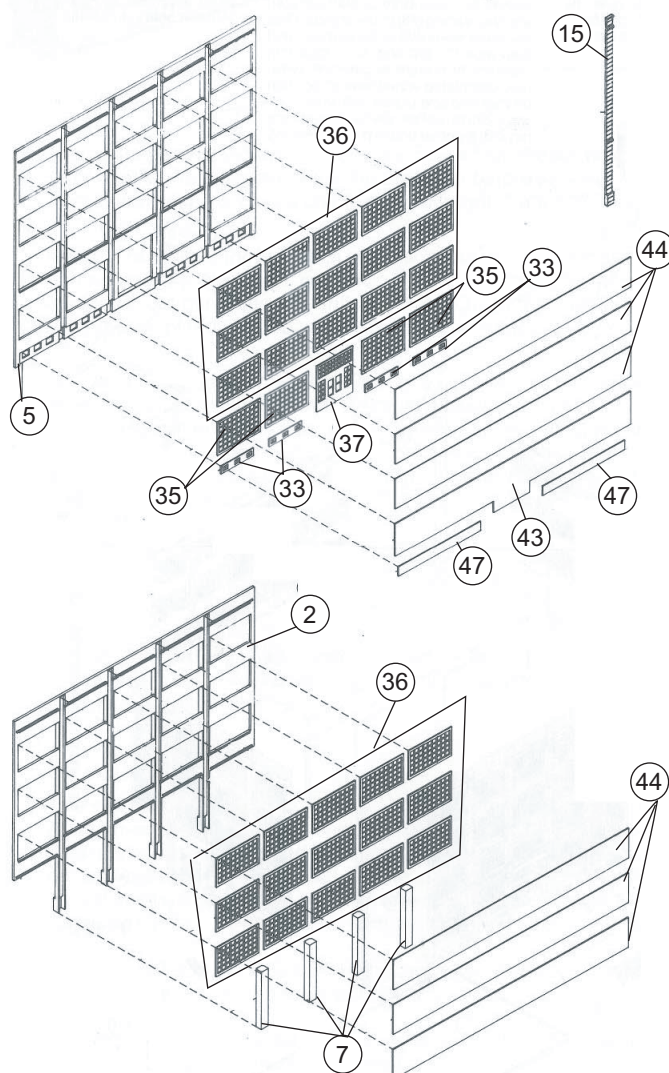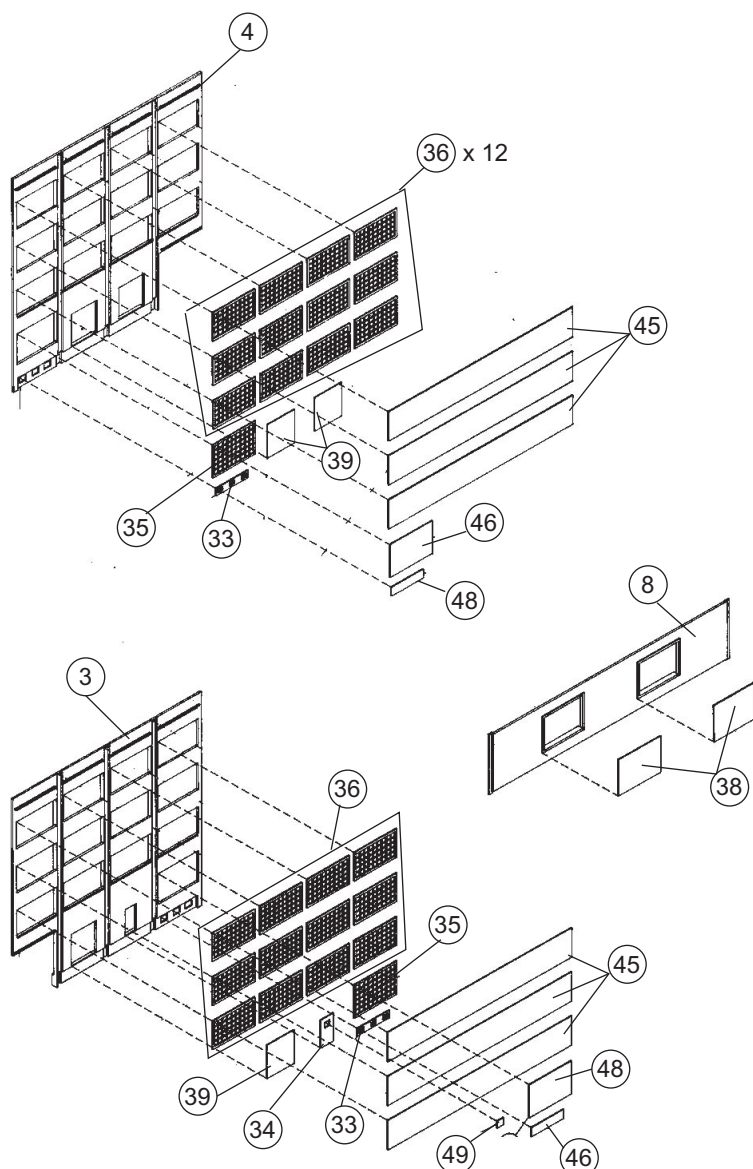

3. First, glue corner pilasters (6) to both sides of the front (5) and rear (2) walls, making them flush with the top of the walls. Then, glue walls (3, 4, 5, 8) to each other and the base (1). NOTE: Wall #8's end pillars will overhang the base. Next, glue the inner roof (9) under the ridges on walls # 3 & 4 and on top of wall # 8. Now, glue rear wall in place.

4. Glue door (34) to back of head house wall (22), and "glass" (49) to back of the door. Then, glue head house walls (20, 21, 22) and roof (32) together and to main roof (31). Glue main roof in position as shown. Next, glue water tower stands (27) to bottom of platform (24), and the bracing (28) to the stands. Glue the tower sides (25) to the platform and then glue the top (26). Glue pipe (30) into hole in bottom of platform. Now, glue completed water tower in position on roof and add ladder (29) where you wish. Finish roof details by gluing chimney (23) together and to pad on the roof.

5. Glue the front entry stairs (16, 17, 18, 19) together and to base and front wall, and then glue railings (41) in place. Next, glue side entry stairs (10, 11, 12, 13) together, along with the railing (42), and then to base and side wall. Complete assembly by gluing stand pipe (40) into hole in front wall.

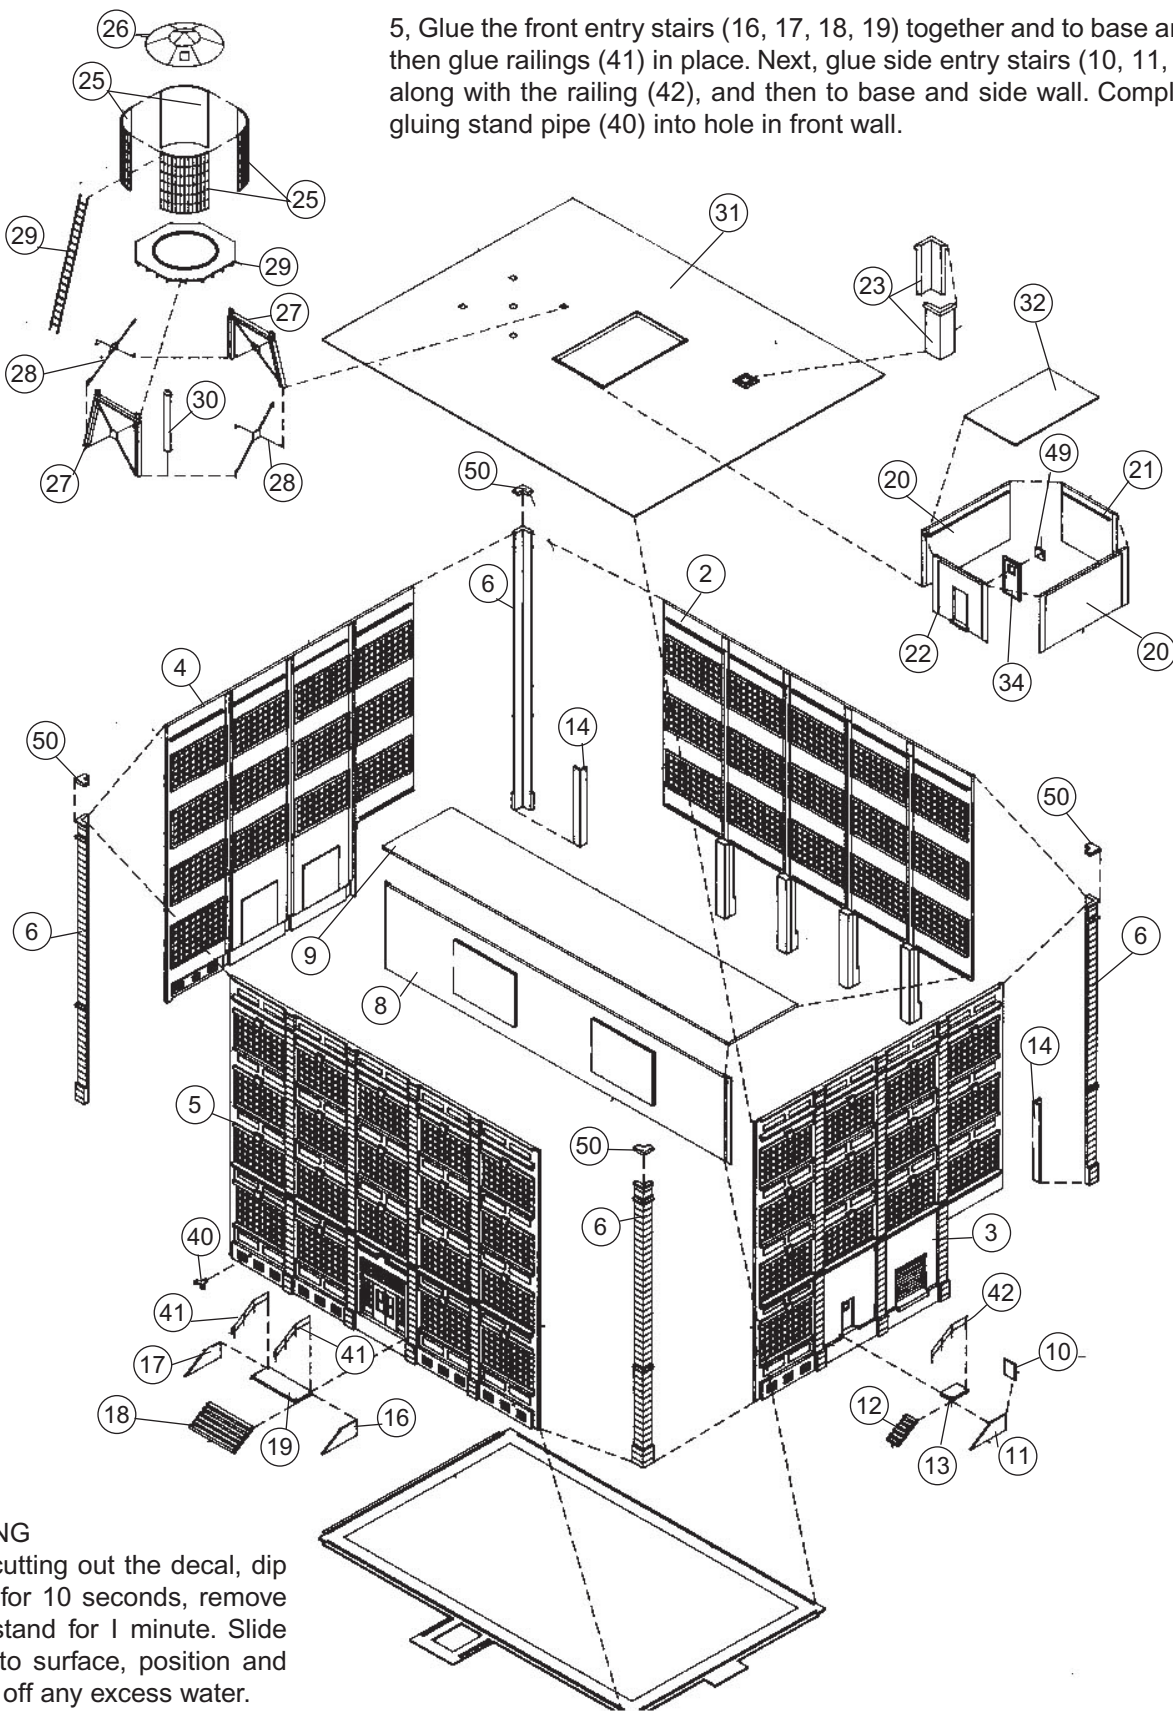

DECALING

1. After cutting out the decal, dip in water for 10 seconds, remove and let stand for 1 minute. Slide decal onto surface, position and then blot off any excess water.

2. Lightly brush Micro Sol® on top. This will soften the decal allowing it to conform to irregular surfaces. DO NOT TOUCH DECAL while wet!

3. When the decal is thoroughly dry, check for any trapped air bubbles. Prick them with the point of a small pin or hobby knife blade and apply more Micro Sol®.